



MERLYN 8 | series FRAMELESS


Installation guide for the Pivot Door

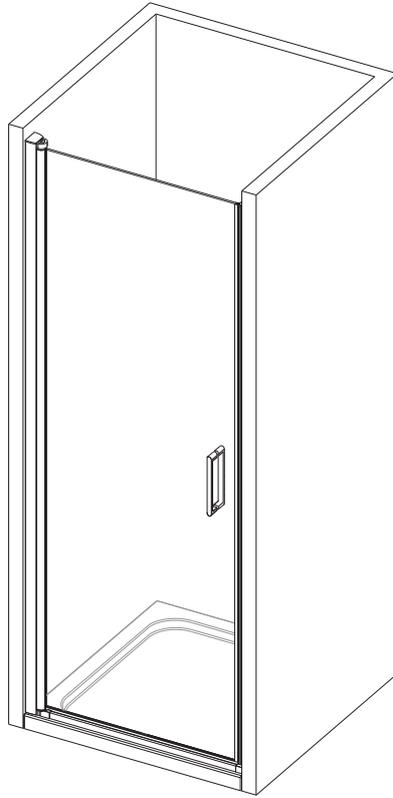

Shower wall

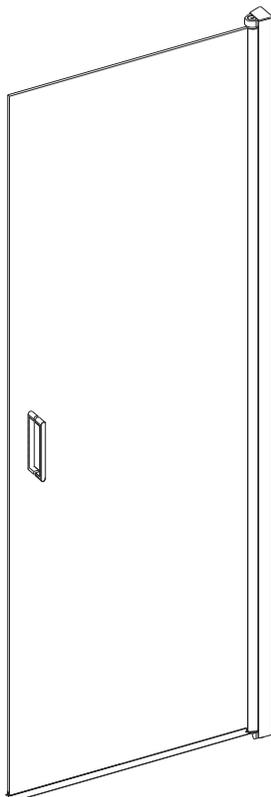

Corner Door

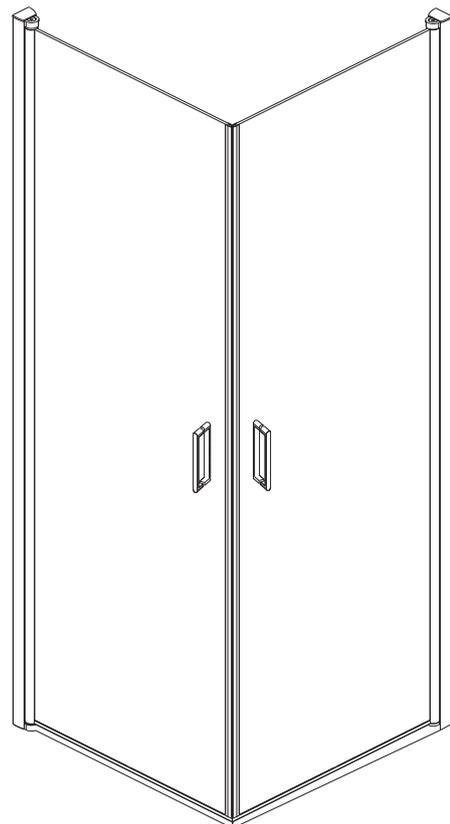

IMPORTANT:
**Please read the complete instructions
before commencing fitting.**

Make sure the tray is 100% level in all directions.

Do Not attempt to install the product unless you can tick all 4 boxes satisfactory.

?Check that you have the tools required

**?Check the installation site is compatible with the sizes
of door supplied**


?Check all the enclosure components are present

?Check the installation kit is complete

The wall plugs supplied with the installation kit are for use in solid walls. Hollow or ?stud partition?walls will require alternative fixings. Please consult a hardware supplier for the correct type.

It may also be necessary to consult your tiling supplier about the correct method for drilling tiles.

**ATTENTION: TAKE EXTREME CARE WHEN HANDLING
GLASS, WEAR PROTECTIVE EYEWEAR AND CLOTHING.
DO NOT LEAVE THE GLASS ON HARD SURFACES AND
AVOID CONTACT BETWEEN THE GLASS EDGES AND
HARD SURFACES OR IMPACTS DURING THE
INSTALLATION.**

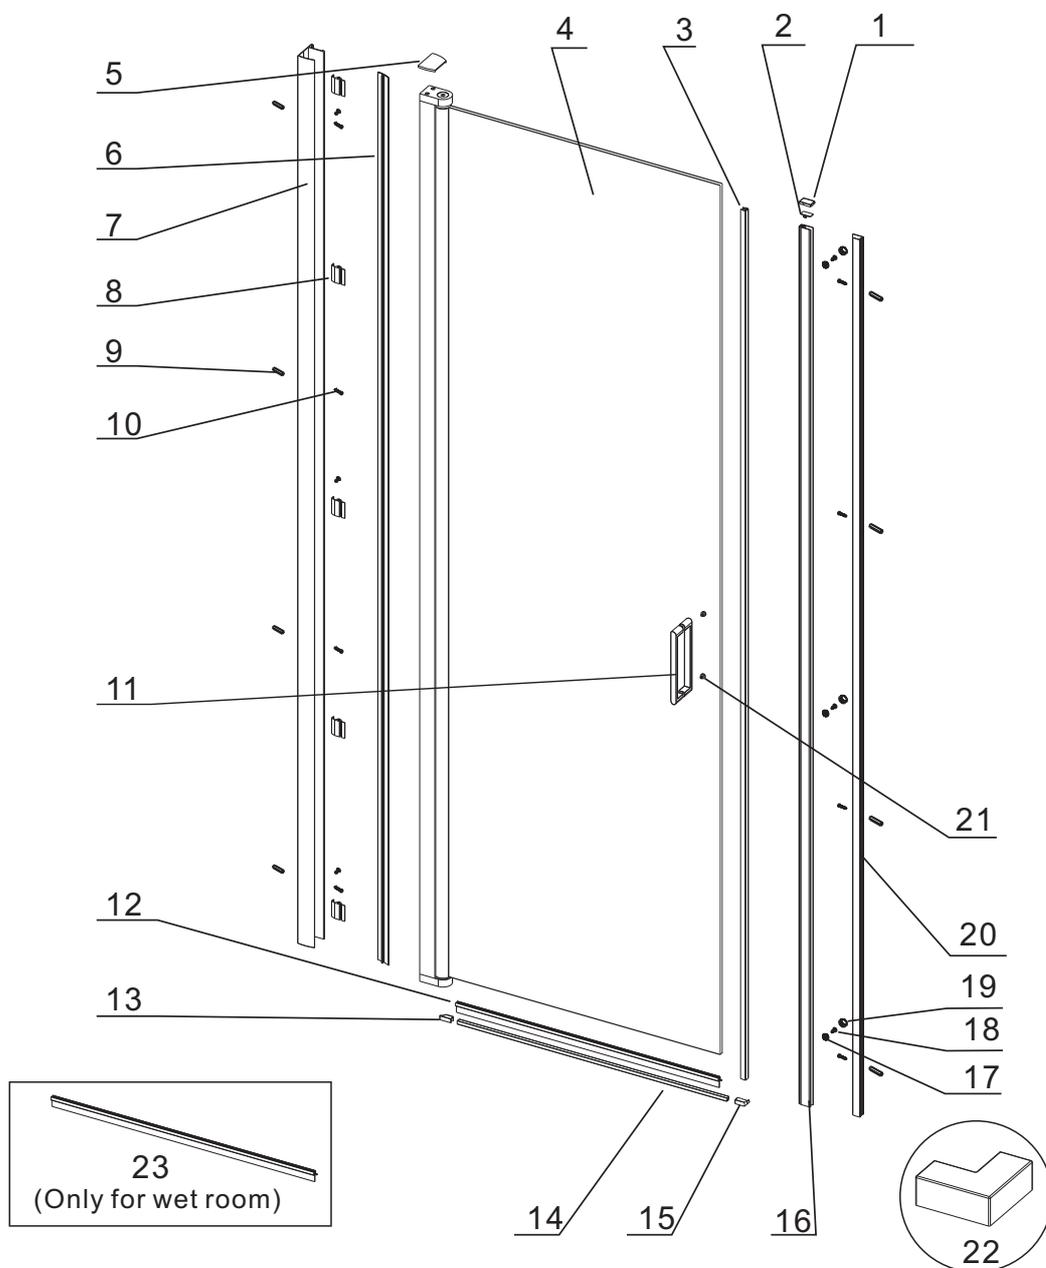


No	Description	QTY	Part No.	No.	Description	QTY	Part No.
1	Closing post cover cap L/R	2	M7120	12	Bottom seal	1	M7157
2	Magnet profile universal cover cap	1	M7121	13	Luna rail end cap hinged side L/R	2	M7137/M7138
3	Magnet seal	1	M7105	14	Luna rail	1	M7159
4	Moving panel A	1	A	15	Luna rail end cap closing side L/R	2	M7147/M7148
5	Cover cap for wall profile L/R	2	M7017	16	Magnet profile	1	M7105
6	Cover strip	1	M7104	17	Screw cover cap clip	3	M7124
7	Wall profile	1	M7100	18	Screw ST4x12	6	A2401201
8	Cover strip clip	5	M7009	19	Screw cover cap	3	M7123
9	Φ6x30 wall plug	8	B08070	20	Magnet wall profile	1	M7106
10	Flat head screw ST4x30	8	2YS51	21	Handle knob	1	SP0M7132
11	Handle	1	M7116	22	Corner bracket	1	M7141
				23	Bottom seal (Longer)	1	M7136

Product adjustments

Adjustment when used as Pivot door in a recess


Size	Adjustment 'X'	Opening space
760	730-760	650
800	770-800	690
900	870-900	790
1000	970-1000	890

NOTE: When the pivot door is being used in a recess you can use it with the lunar rail or without the lunar rail (longer fin seal supplied)

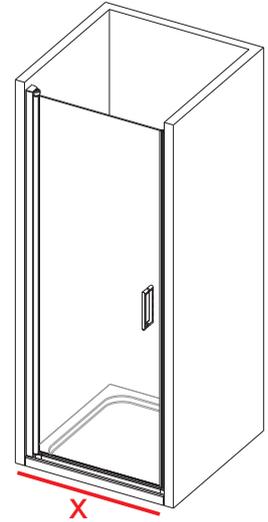


Adjustment when used as Shower wall

Size	Adjustment 'X'
760	690-710
800	730-750
900	830-850
1000	930-950

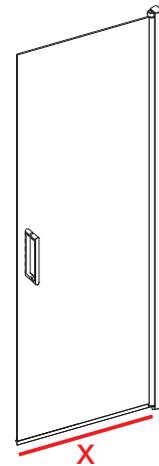


Adjustment when used as Corner door

Size	Adjustment 'X'
760x760	715-735
800x800	755-775
900x900	855-875
1000x1000	955-975

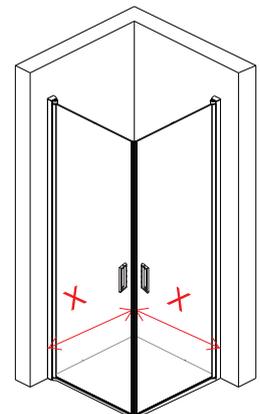

NOTE: When the door is in a corner door situation you can use it with the lunar rail or without the lunar rail (longer fin seal supplied)

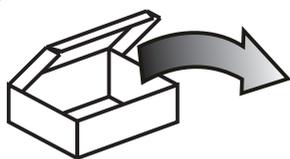

Fixing kit components

4x30mm



2SY51x8

4x12mm



A2401201x6




B08070x8




M7124x3



M7123x3

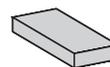

M7020
X1

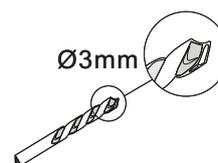


Ø3mm

B08092x1



M7017x2

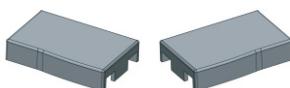

M7120x2



M7140x2



M7121x1




M7137x2



M7116x1







B08068x1

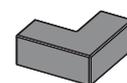


M7141x1


Tools required

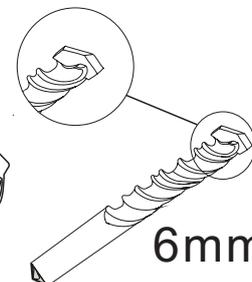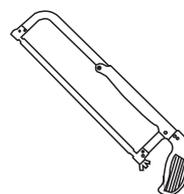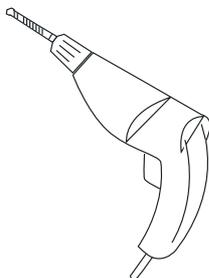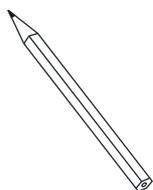

6mm

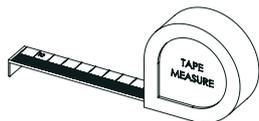


PH2

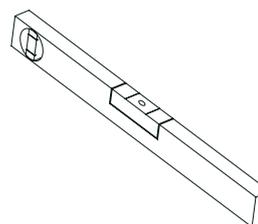

1


Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. Do not angle out bottom tile.

TRAY MUST BE LEVEL IN ALL DIRECTIONS!
TRAY MUST BE SEALED FULLY IN ALL AREAS WHERE THE TRAY MEETS THE WALL.

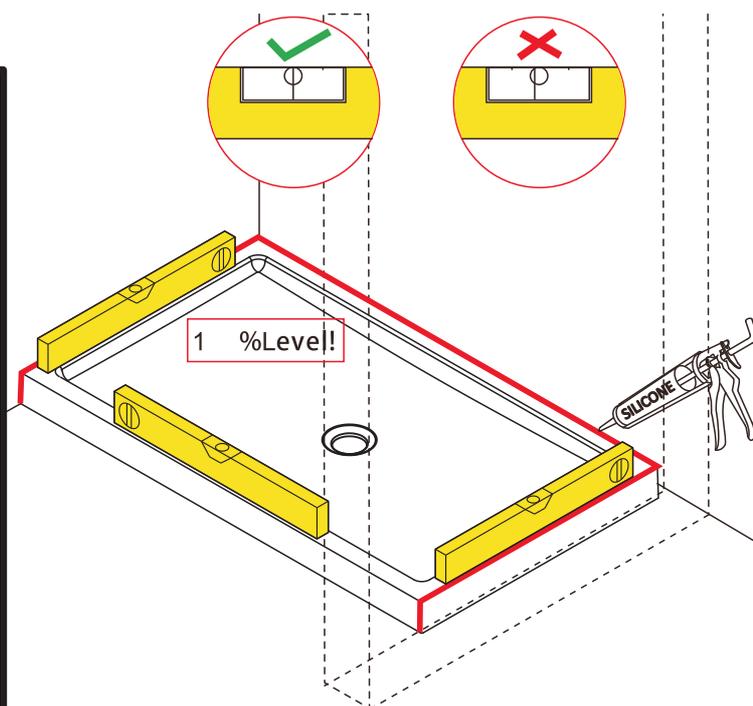


2


B

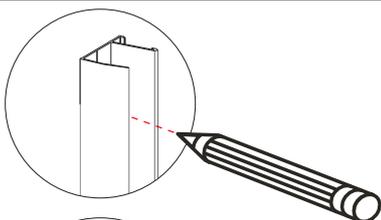



C

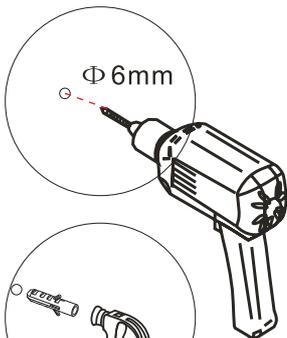

D

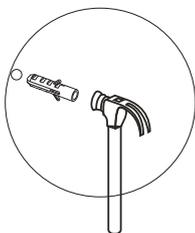



E

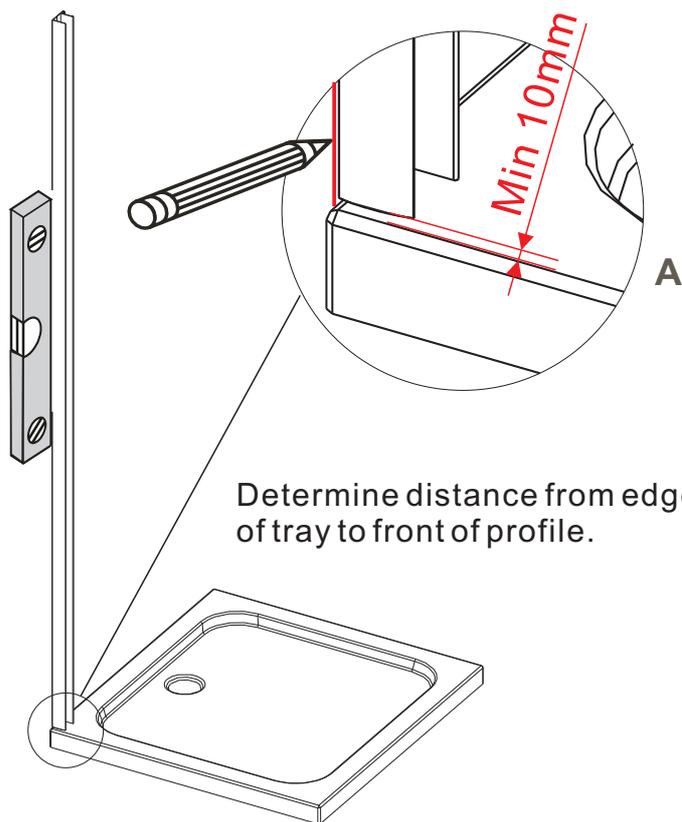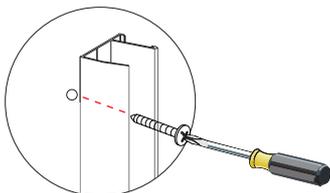


Determine distance from edge of tray to front of profile.

The door is set up as a left hand unit for a right hand door the M7024&M7025 brackets must be swapped from top to bottom to allow for a left and right hand product.

NOTE: M7025 with the V shape should always be on the bottom.

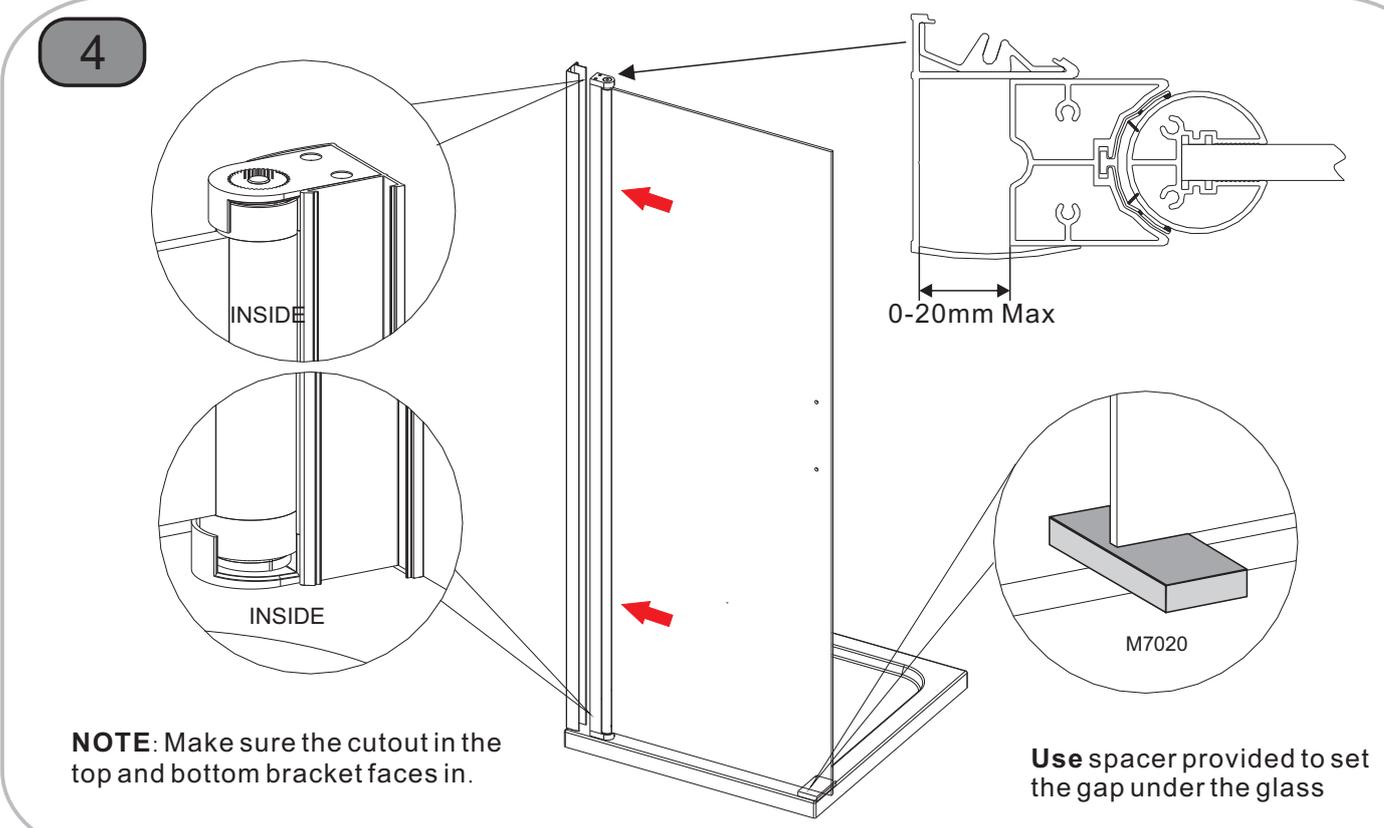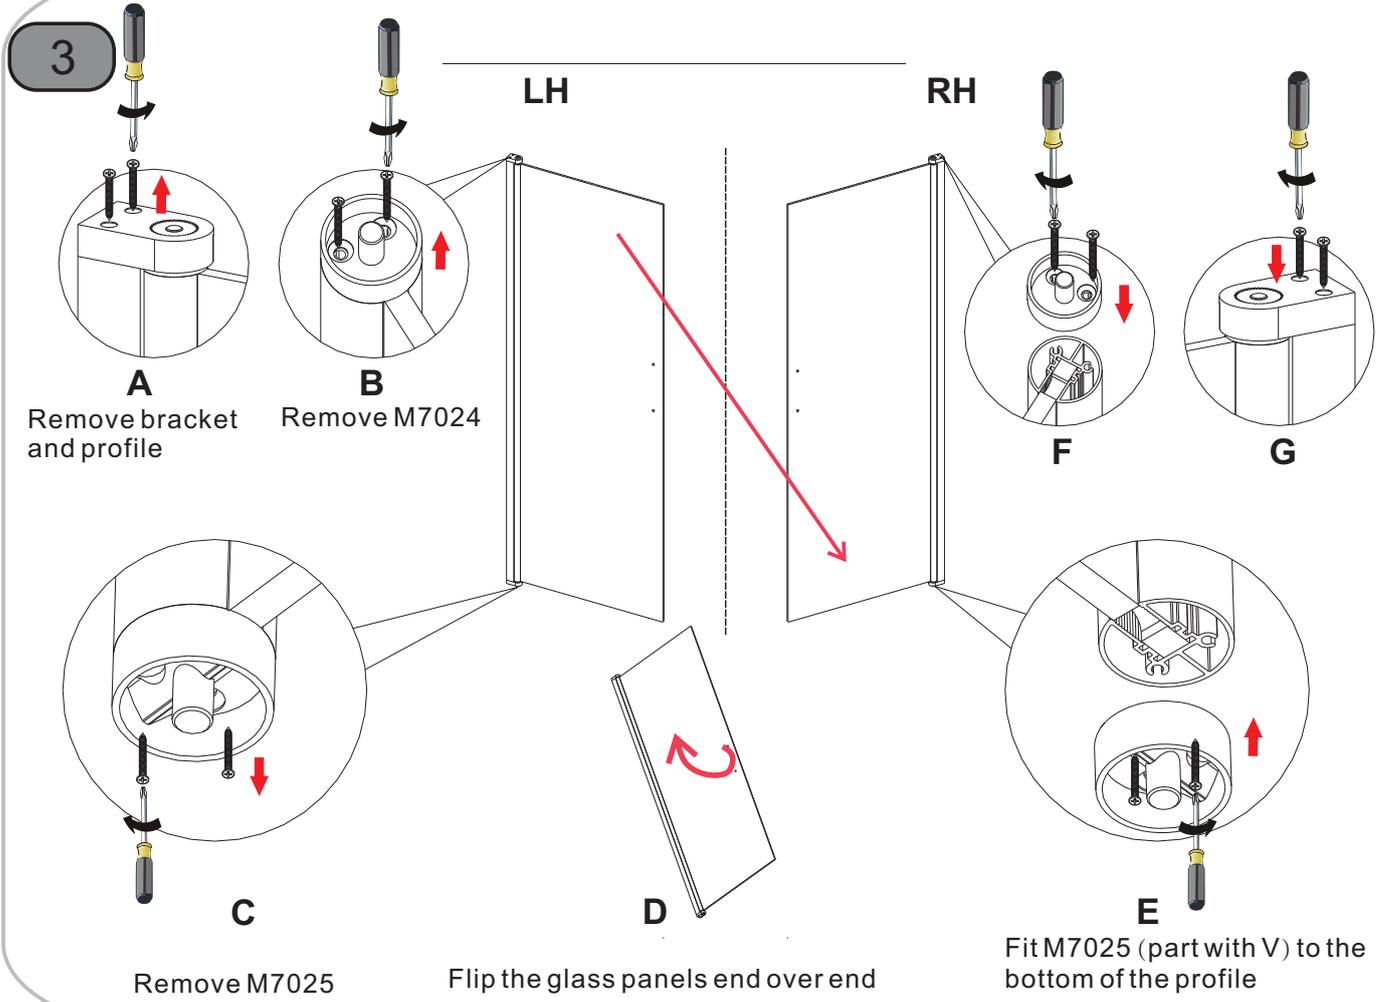


5

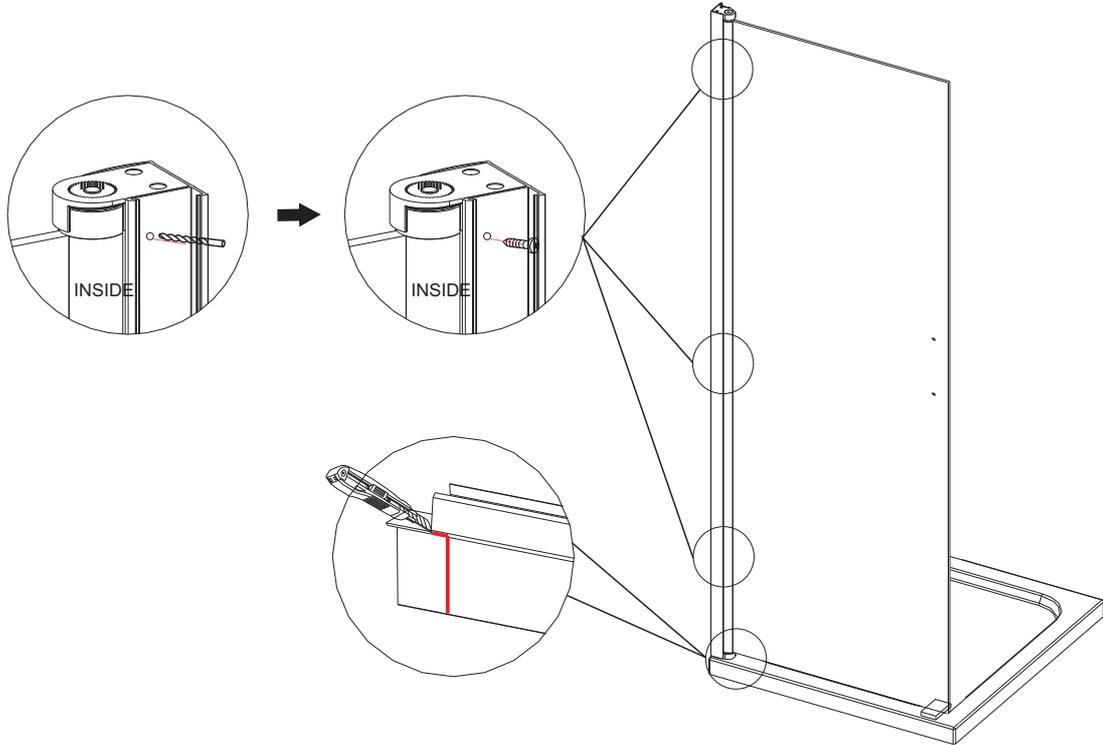

Note: If fitting as a shower wall skip to step 09 for sealing instructions. If fitting as a corner door skip to step 10.


6

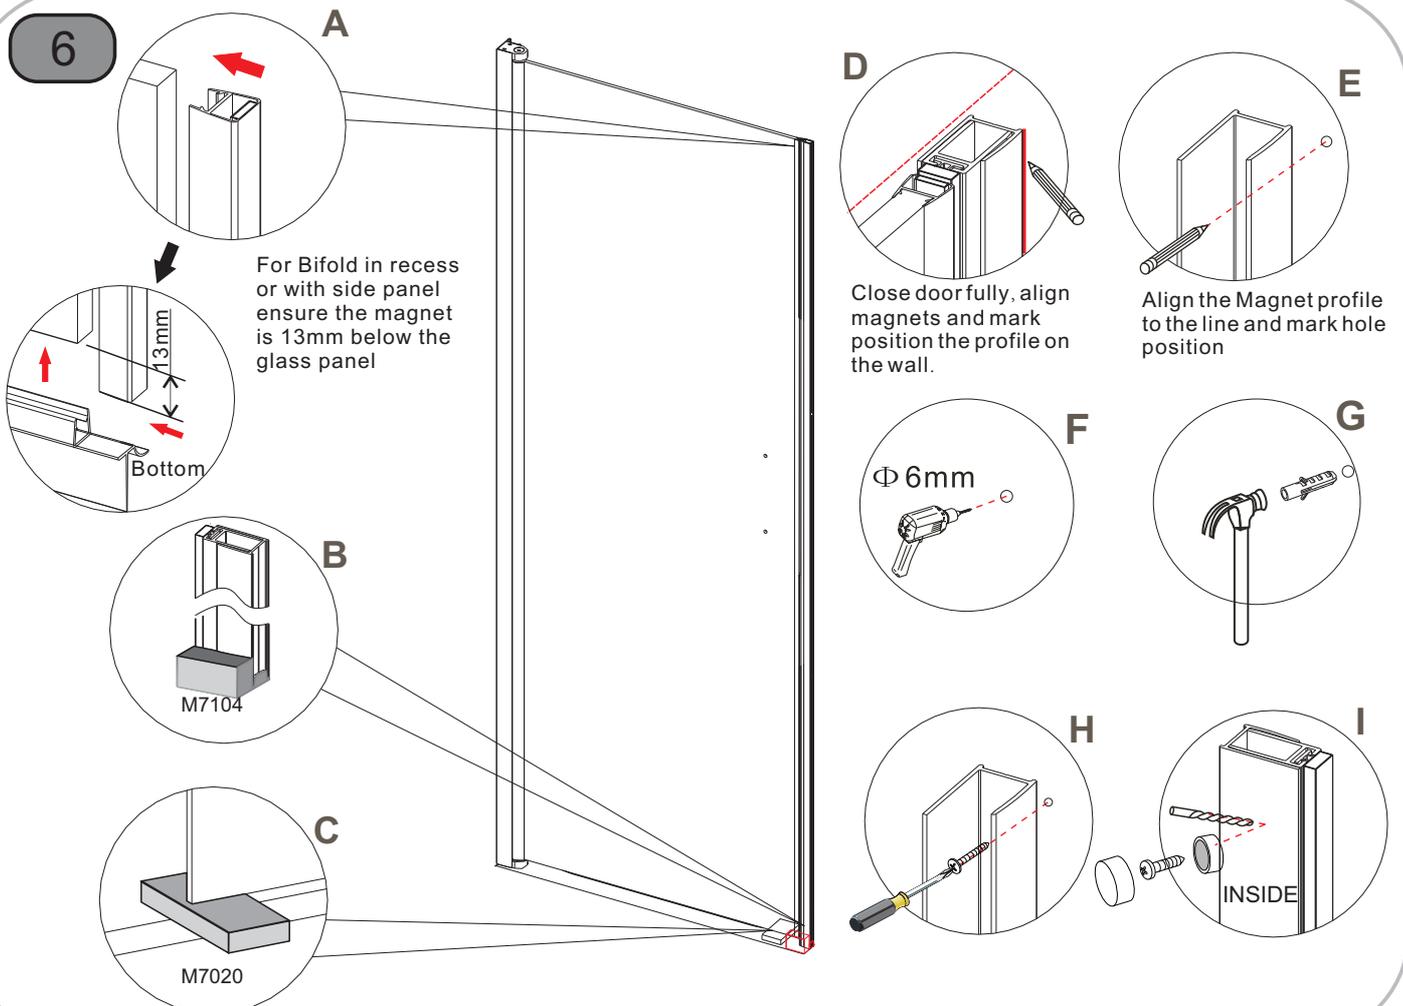


7

LUNAR RALL OPTION


Place Luna rail into closing side (1) first, then fit hinged side foot plate (2).

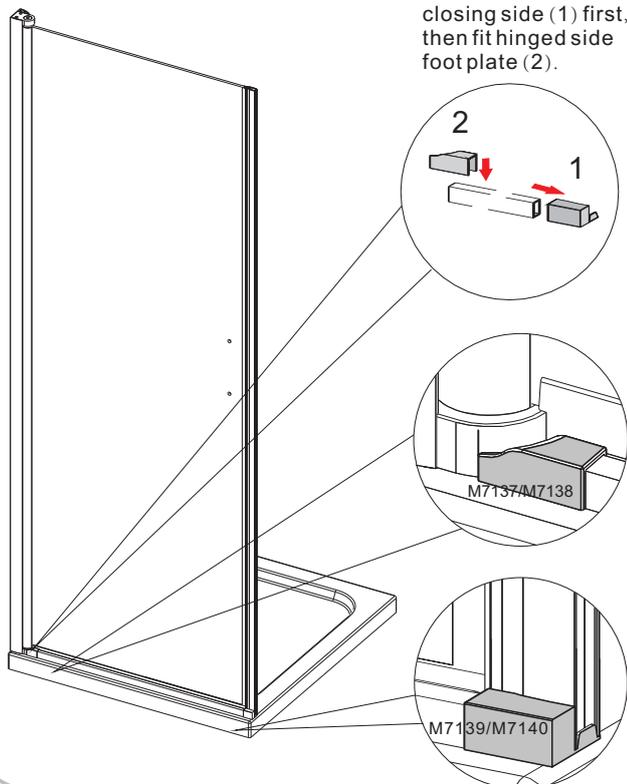


WITHOUT LUNAR RALL OPTION

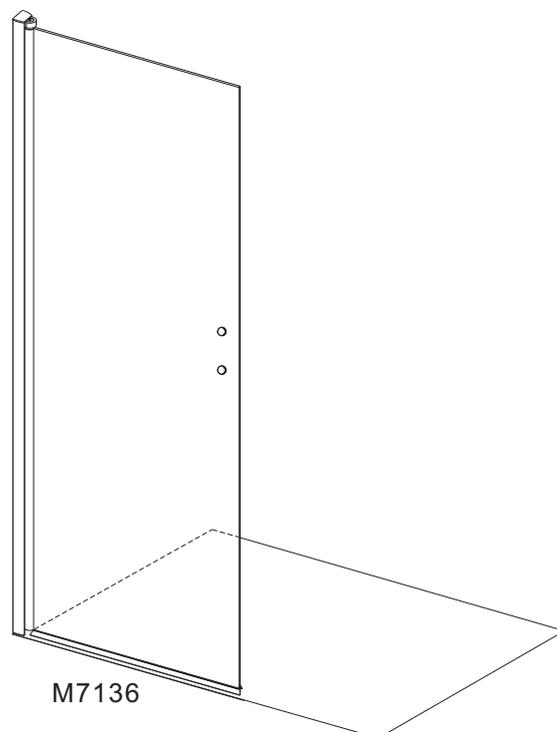

8

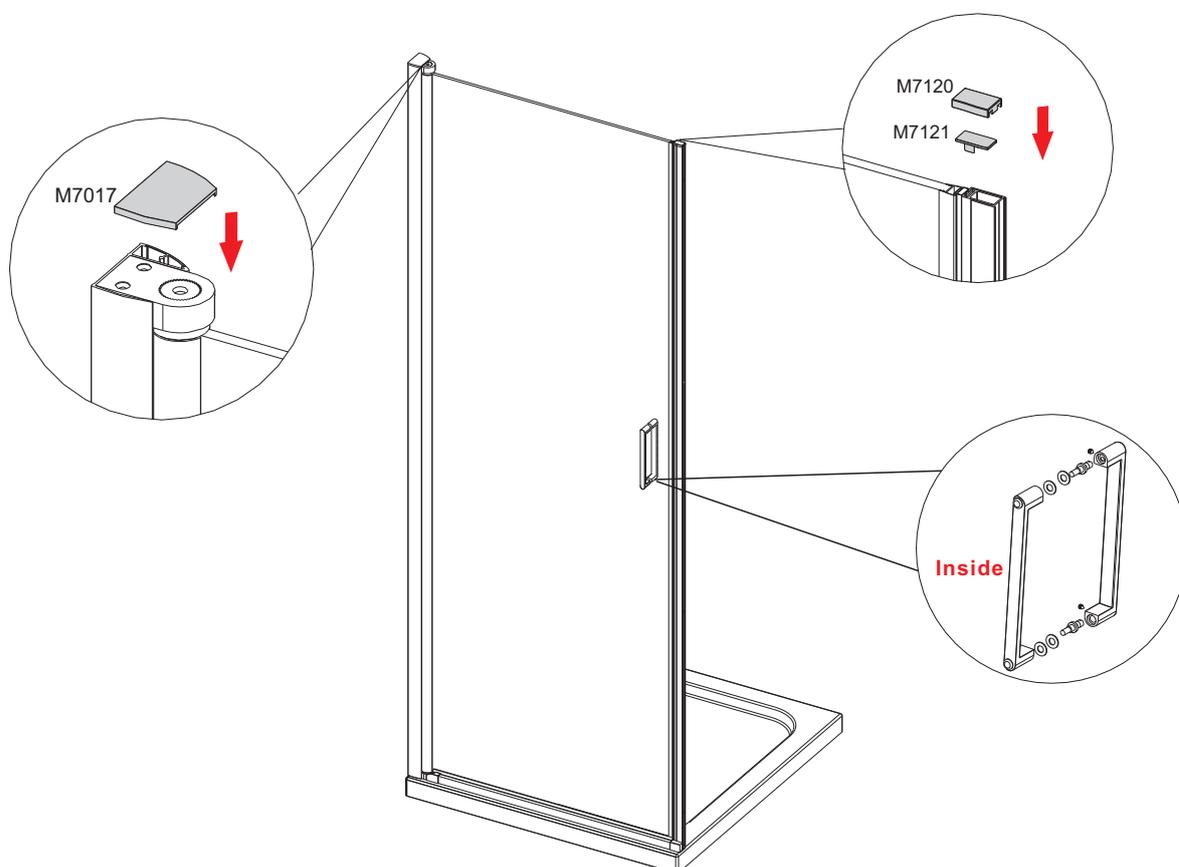

9

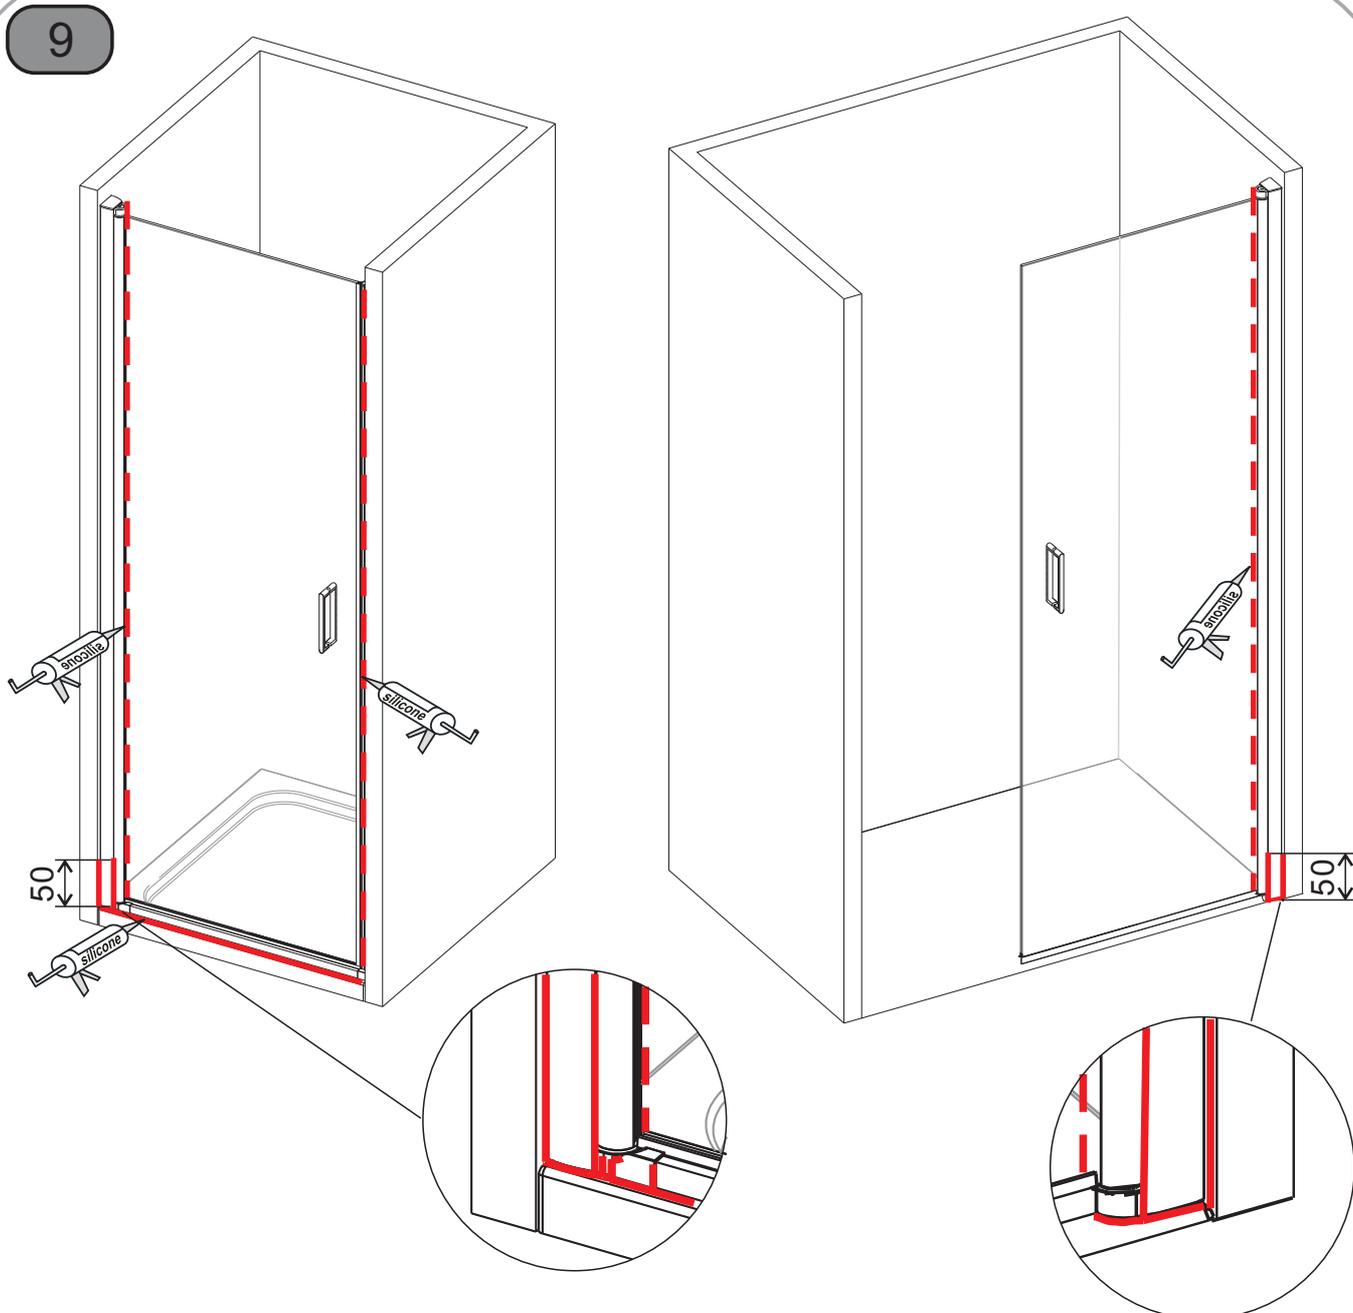


SEALING INSIDE

Seal top to bottom on the **INSIDE** between the wall profile and the wall.

Note: Do not apply sealant on the inside of the tray.

SEALING OUTSIDE

Seal only along bottom on the **OUTSIDE** between glass/rail/profile and the tray and approx 50mm up between the wall profile and the wall. Seal joint between bottom profile and upright profile.

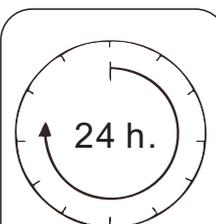


DO NOT USE THE
ENCLOSURE FOR
24 HOURS AFTER
SEALING

10


Corner door option

Pivoting Side
Cut excess only from the hinged side of both seals.

Magnetic Side

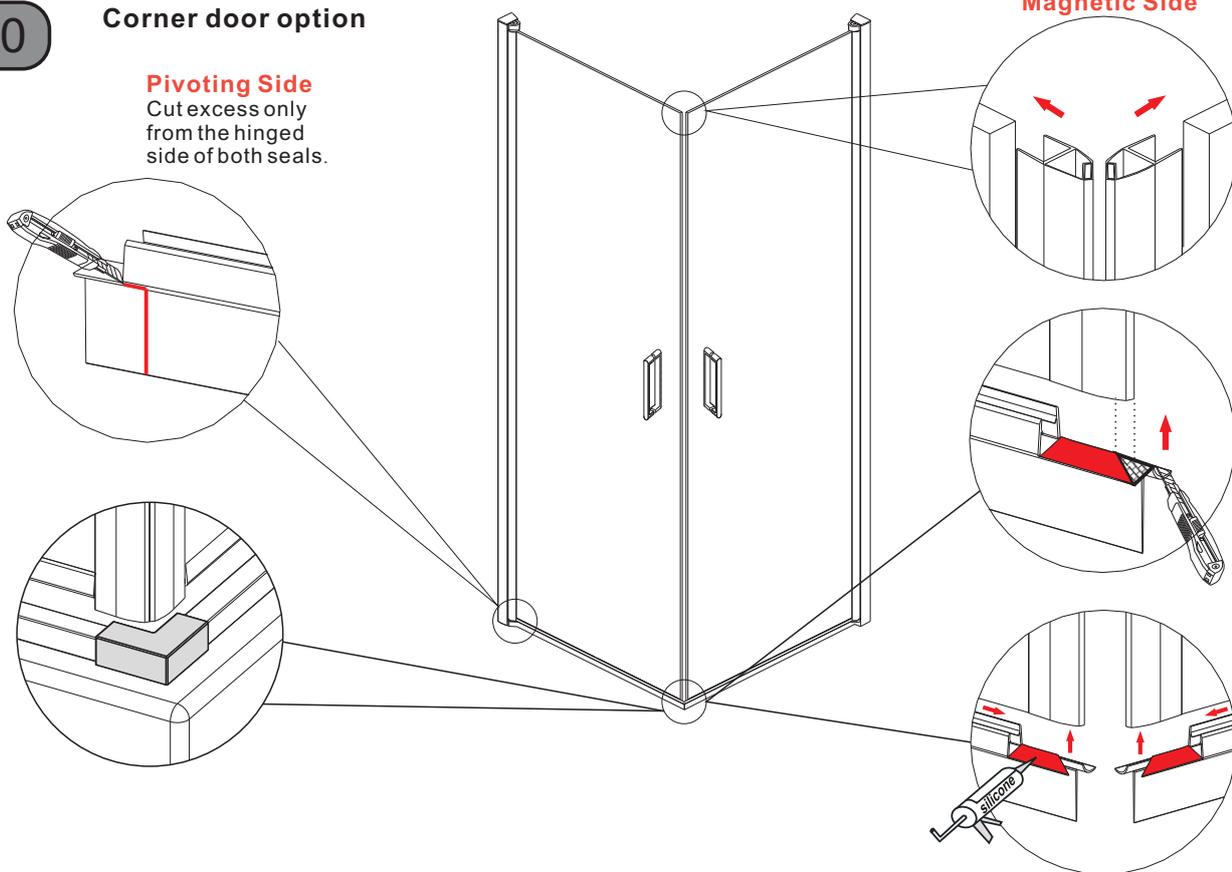

11

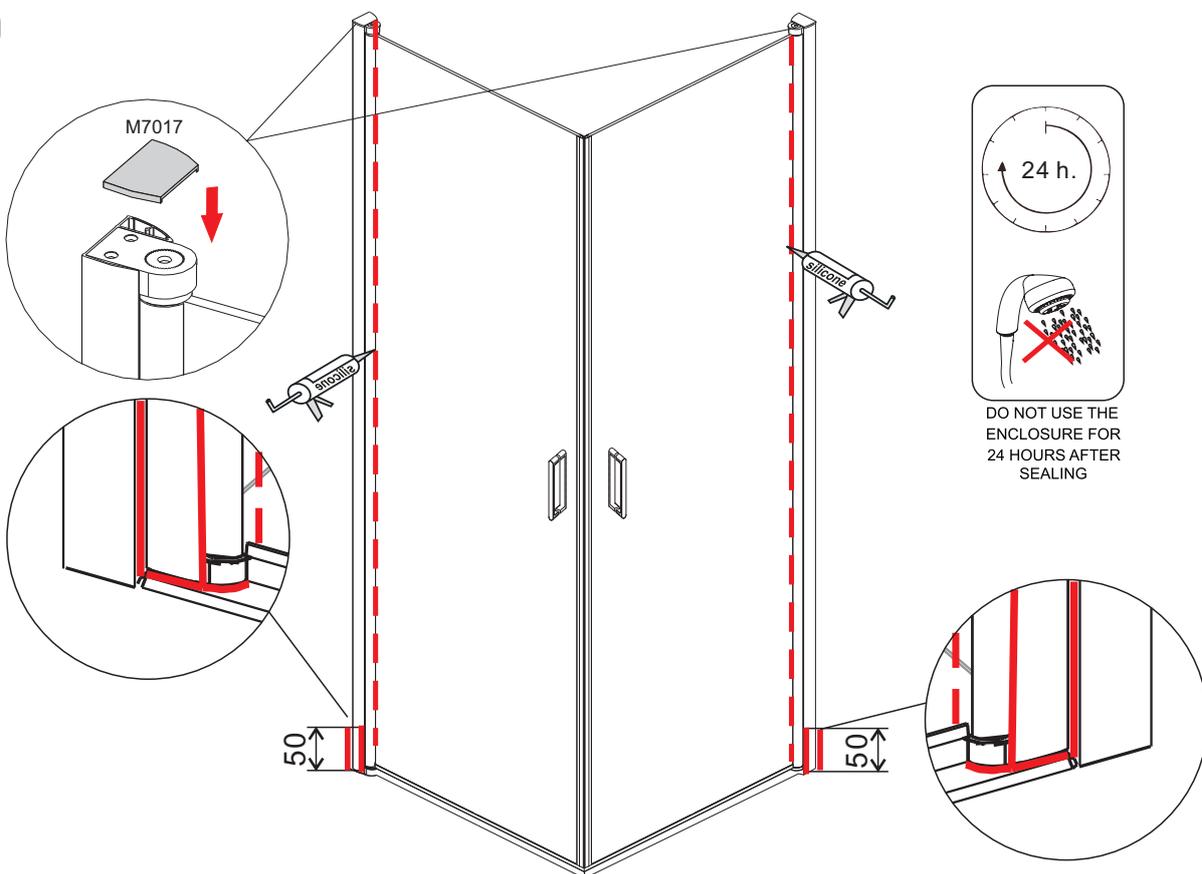

CLEANING

It is important to clean your Merlyn shower door after every use. Wipe down all the glass and metal parts with a soft cloth. Do not allow lime scale to build up in hard water areas. Ensure that any residual water on the glass is removed after every use.

- ? Clean the glass regularly using soapy water.
- ? Do not use abrasive products on any surfaces.

Chrome is vulnerable to acid attack and some strong household cleaners including strong disinfectants, denture cleaners, hair dyes, wine making chemicals and photographic chemicals may contain acid. These materials may have a varying effect on the surface from black spots/streaks (which cannot be removed) to pitting the surface. Contact with these materials should be avoided.

TROUBLE SHOOTING

Door Not Aligning

1. Is the tray 100% level? (see page 5)
2. Have the walls been checked at different levels to ensure consistency? Bumps or hollows in the wall may push the frame out of alignment.
3. Are the wall profiles stepped in a Min. 10mm from the edge of the tray? (see page 6)
4. Do the finished tile measurements at top, middle and bottom fall within the adjustment (X) listed on step 2.

Door Leaking

1. Is the door sealed correctly ? (see step 11)
2. Check to ensure the door frame is 100% square.

	
Merlyn Industries Ltd (MERO9)	
18	
EN 14428	
Declaration of performance number CES8FPI1.1	
Shower enclosures with aluminium profiles and safety glass	
Cleanability	: Pass
Impact resistance/ shatter properties	: Pass
Durability	: Pass

To download the Declaration of Performance (DOP) for this product use the link below.
<http://merlynshowering.com/aftersales-support/dop-certs/>
For further information contact IRL: 056 7791 888, UK: 0808 1011 429